



1

MEASURE AND MARK THE POSITION OF THE SCREWS DEPENDING ON THE WIDTH OF YOUR FRONTS.

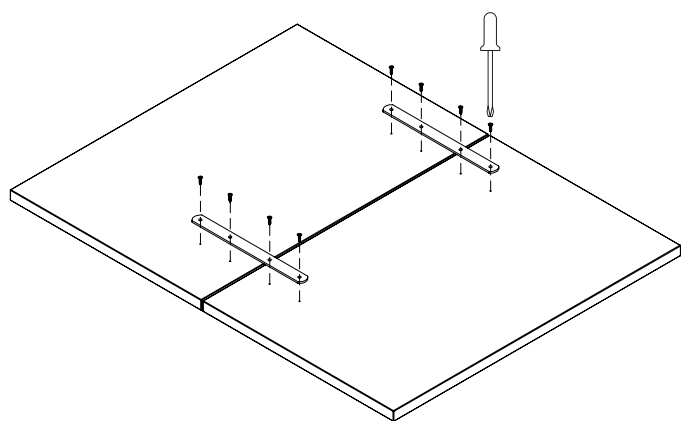

2

FASTEN THE FRONT CONNECTOR ONTO THE FRONTS WITH SCREWS.

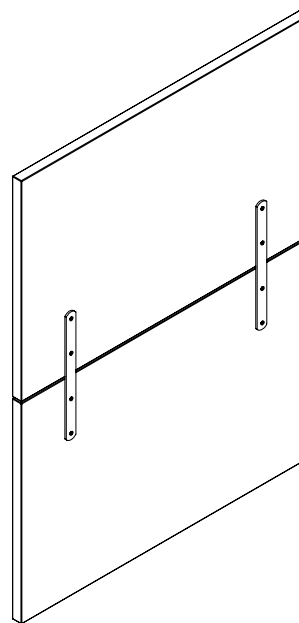

FINISHED PRODUCT